


# registered office: Deller Str. 16 · 58339 Breckerfeld / Germany · Tel +49 2338 5919710

shipping address: Am Sinnerhoop 70 · 58285 Gevelsberg / Germany · Tel +49 2332 544360

**Product presentation** 

**FG Ceramic Carbon Injection Lance** 

decrease your production costs minimize downtime

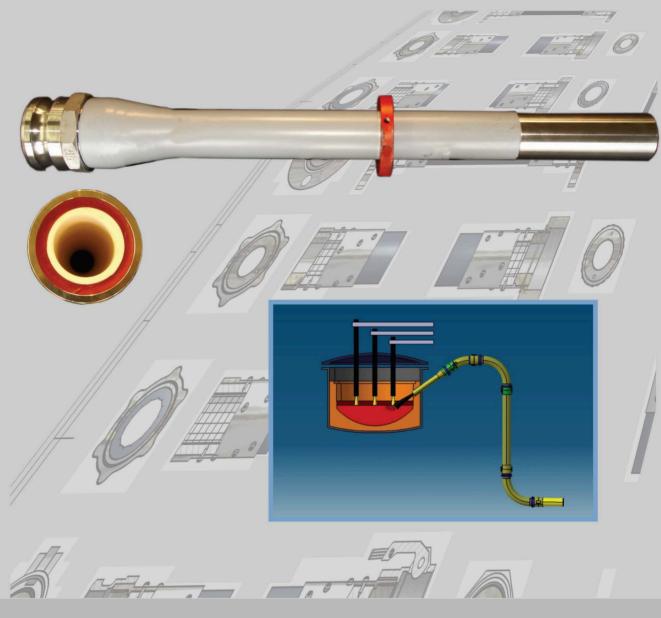


website: https://www.friedrich-gerke.de e-mail: info@friedrich-gerke.de

# **Technical description**

# **FG Ceramic Carbon Injection Lance**

# Extraction of foam slag from insert-carbon in the Electric Arc Furnace

common technique

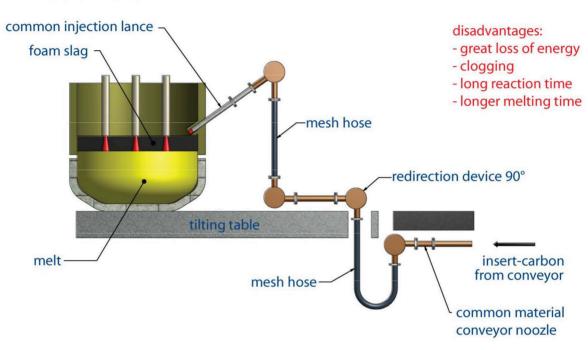

improvement with standard ceramic carbon-injection-lance\*

# + homogeneous flow ceramic lance with of material inside heat-resistent front conveyor system foam slag degree + optimum energy ceramic pipe bends efficiency ceramic hose ceramic pipe bend tilting table insert-carbon melt ceramic pipe from conveyor ceramic hose ceramic material conveyor noozle



advantages:

# Range of Use

# **FG Ceramic Carbon Injection Lance**

- applicable in EAF, laddle-, blast- and cupola furnaces and rotary kilns
- energy-saving due to gentle use of material and fast supply of material into the process
- due to specific modification the material is supplied to the process in a concentrated manner
- rapid configuration of foam slag
- any medium to be conveyed: mineral solid material as well as recycled and mixed additive energy sources can be added easily in a pre-determined grain size
- long-lasting durability because of Al2O3- and SIC-ceramics
- heat-resistant to max. 1050°C
- easy handling because of low weight
- fast changing owing to Camlock-, Quick- or Clamp joints in connection with a flexible ceramic hose

## Important notes

The lance should generally be equiped with ceramic pipe bends.

Our advice: finishing the lance with ceramic pipe bends and fitting quick joints saves time and money. This procedure is successfully realized in several steel mills with different furnace types.

The lance should generally be operated with air flow before and after use to avoid splatter and sedimentation at the vent of the lance.

The first 100-150 mm of the lance should be made of heat-resistant steel when used in some particular furnace types.

Compared to common lances, which usually consist of metallic injection lance and joint, the lances mentioned are evidently reaching a far longer operational lifetime.





# **Specification**

# **FG Ceramic Carbon Injection Lance**

Sizes: dimensions DN 25, DN 32, DN 40, DN 50

### Construction

Inside: Al203-ceramic / SIC-ceramic

Outside: regular steel / stainless steel of different grades / heat-resistant steel

The lances can be equiped with heat-resistant joints (ceramic/steel) for the permanent use in various furnaces up to a maximum temperature of 1050°C.

### **Electric Arc Furnace (EAF)**

- production of foam slag by using centre punched coal
- injection of recycled, mixed and selected energy sources of determined grain size: wood /plastic / synthetic material / rolled tinder
- injection of filter dust to increase proportion of zinc
- injection of alloy material

### **Laddle Furnace**

- injection of insertion coal for enrichment on the molten pool (bubble eye)
- injection of metallurgical machining allowances for fine tuning (bubble eye)

### Blast Furnace

- injection of fire-resistant material to stabilize and mend the brick

### Linning of the Furnace

- injection of additional energy sources
- injection of recycled and grinded hazardous waste cupola furnace and rotary kiln
- injection of additional energy sources and filter dust

### **Joint Components**

- camlock coupling: V2A / regular steel / brass
- flange joint
- clamp joint
- tank truck joint
- hose joint for quick lance changing at furnace edge
  - ceramic hose for different types and joint components
  - material conveyor hose made of fabric/rubber compound in different
- shore hardness (concerning the medium)
- hose joint towards the lance below the furnace
  - material conveyor hose
  - ceramic hose in range of arc
  - hose connections requested

Hoses should be covered with heat- and splatter guard sheath when used in hot regimens!

